 


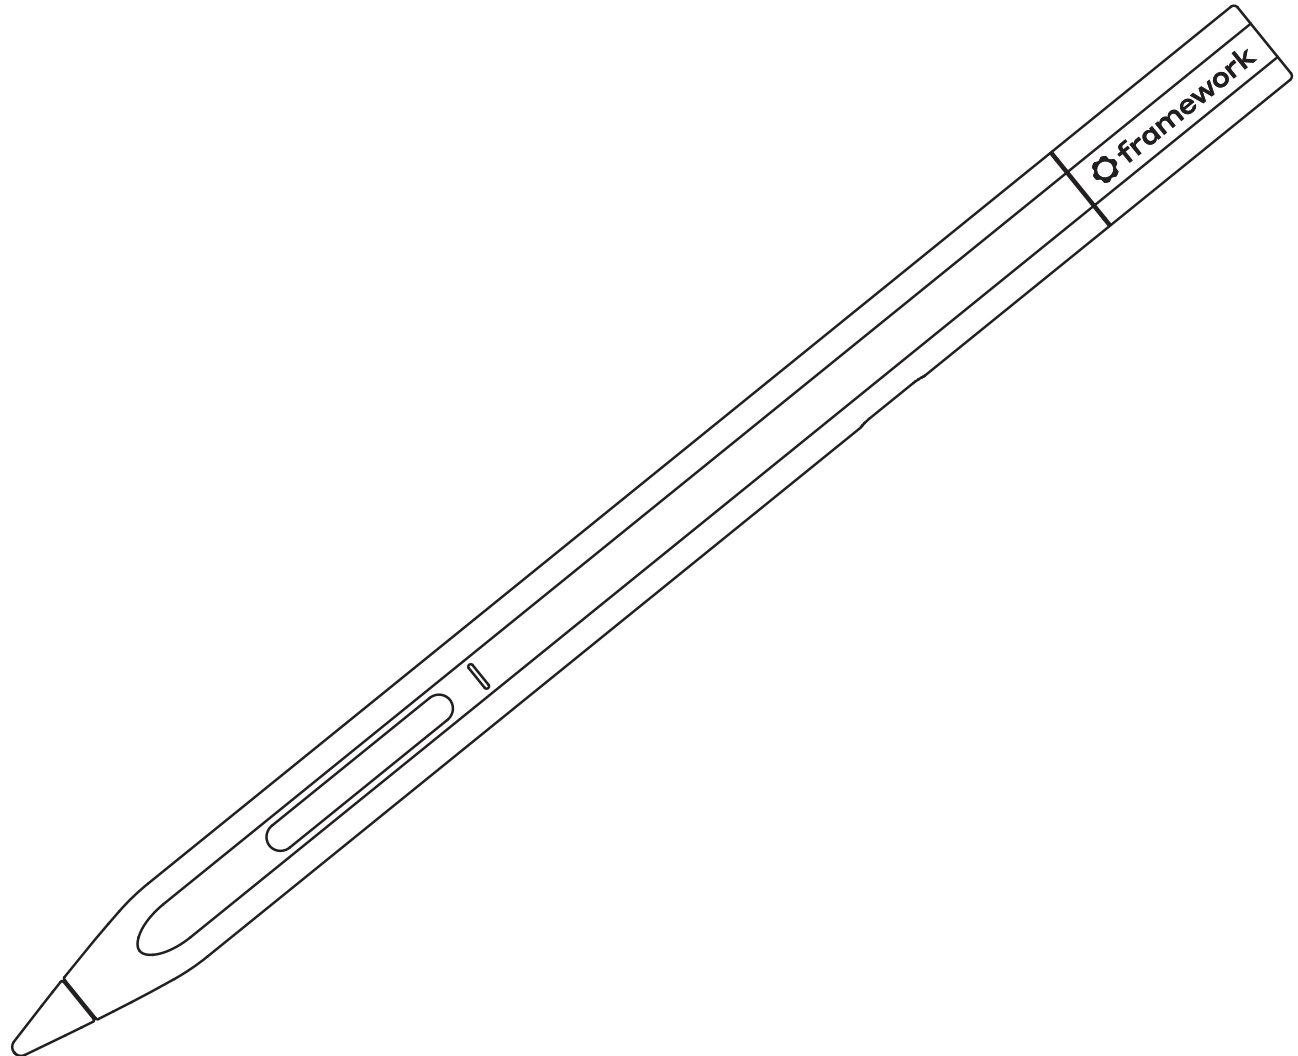


Framework Laptop 12 Stylus Quick Start Guide

Product Setup

1. Plug in a USB-C power adapter and charge for three or more seconds before use.
2. The built-in motion sensor will detect movement and automatically wake the stylus.
3. The stylus supports Windows, Linux, and ChromeOS systems without needing configuration.

 Parts and features

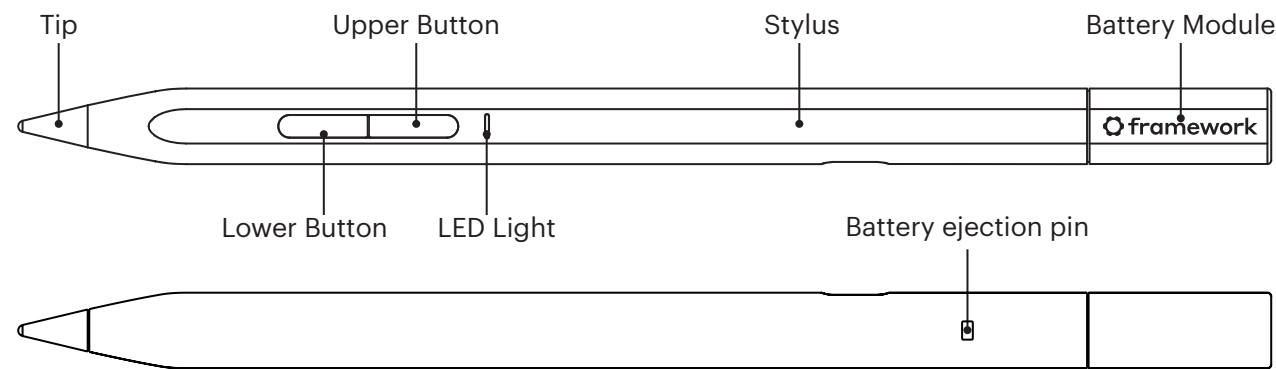

Default functionality in Windows 11

Button	Functions / Descriptions
Upper Button	Right click
Lower Button	Eraser

Default functionality in ChromeOS

Button	Functions / Descriptions
Upper Button	Right click / Defined by App
Lower Button	Eraser / Defined by App

Switching between Windows and ChromeOS

1. Switching from Windows to ChromeOS works automatically.
2. To switch from ChromeOS back to Windows, first connect the stylus to a USB-C power adapter to reset the mode.

Sleep Mode

1. Your stylus will enter sleep mode after 3 minutes without using.
2. To activate, simply start writing.

Charging Indicator

Status	LED Behavior
Low Power	Red LED blinks once per second
Charging	Orange
Fully Charged	White

Battery level indicator

1. Press and hold both buttons for 2 seconds to trigger the battery level indicator.
2. The LED will then light up for 5 seconds to indicate the battery level, as shown in the table below:

Battery Level	LED Color
96-100%	White
6-95%	Orange
0-5%	Red

Replacing the Stylus Tip

Follow this guide to remove and replace a broken or worn-out tip on your Framework Laptop 12 Stylus.


Note: The Stylus comes packaged with two spare tips.

 Stylus Tip Replacment https://fr.mw/FRAPBW	What you need   Framework Laptop 12 Stylus Tip Pack	Buy it here  https://fr.mw/FRAPBW0001
--	---	---

Step 1

Pull the tip out of the Stylus

- Use your fingers to grab the Stylus tip and pull it straight out of the Stylus.

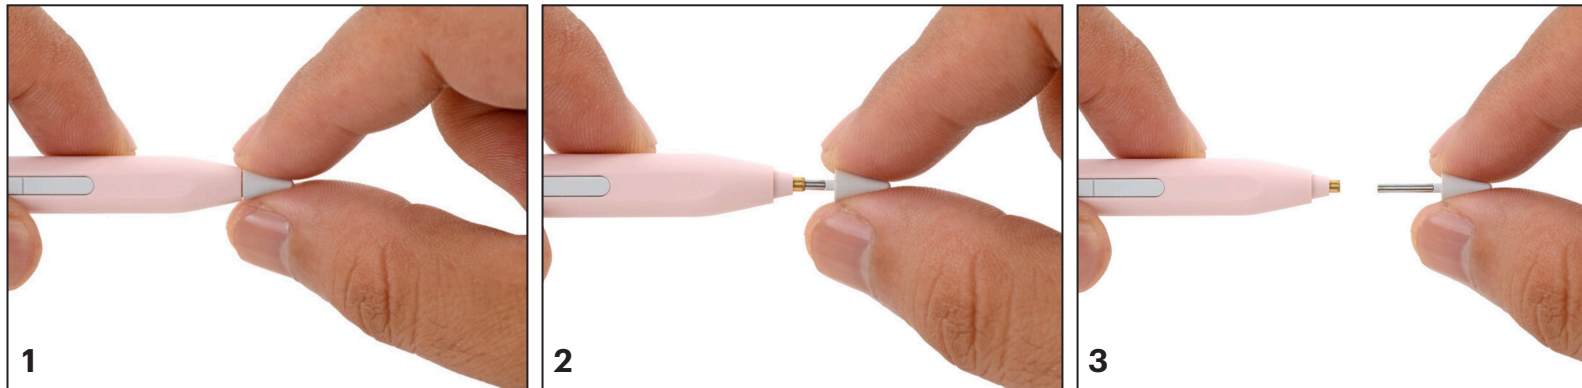




i If you're having trouble pulling the tip out:

- Wrap some tape around the tip to give you more grip.
- Use your fingernails to grip the back lip of the tip.
- Insert thread or dental floss into the seam between the tip and the Stylus barrel and pull gently.

Step 2

Insert the tip

- Use your fingers to slide the new tip into the Stylus.
- Push the tip in until it bottoms out. It should be able to spin but not fall out.

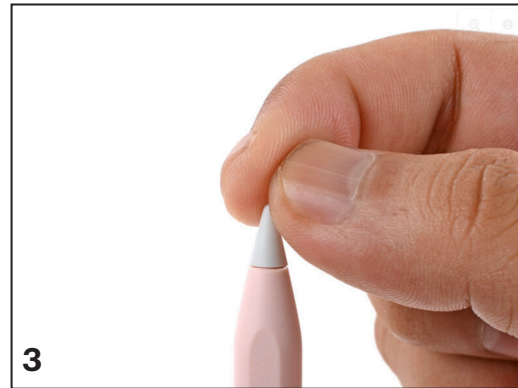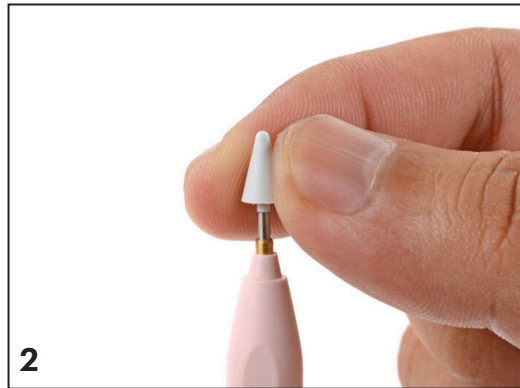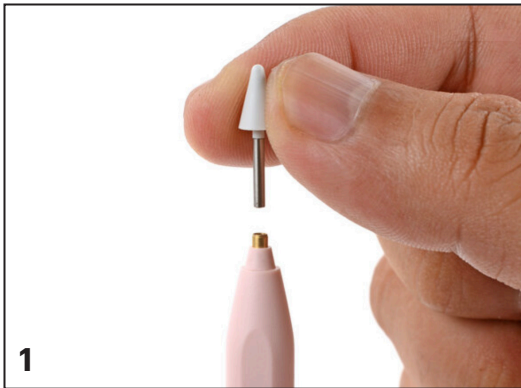

Replacing the Stylus Battery

 
The Stylus battery is in the rear cap of the Stylus. To replace the battery, you'll replace the entire cap.



**Stylus Battery
Replacement**

<https://fr.mw/FRAPBY>

What you need



Framework Laptop 12
Stylus Battery

Buy it here



<https://fr.mw/FRAPBY0002>

 
 


Framework Screwdriver

Step 1

Unlatch the battery



- Use the corner of your Framework Screwdriver or a small pin to depress the small rectangular battery clip on the barrel of the Stylus, near the cap.

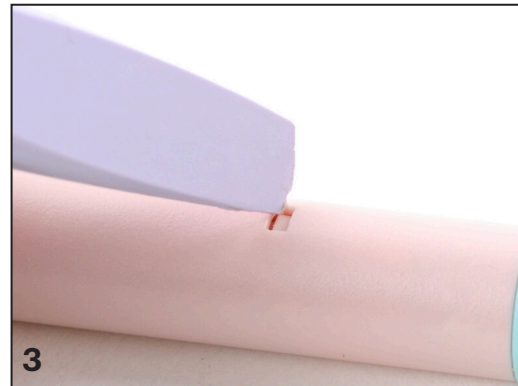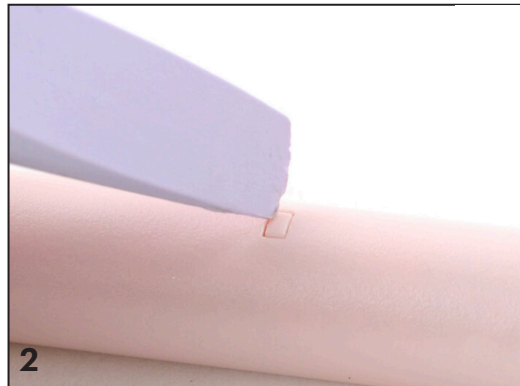

Step 2

Remove the battery

- As you depress the clip, use your fingers to pull the battery straight out of the back of the Stylus to remove it.


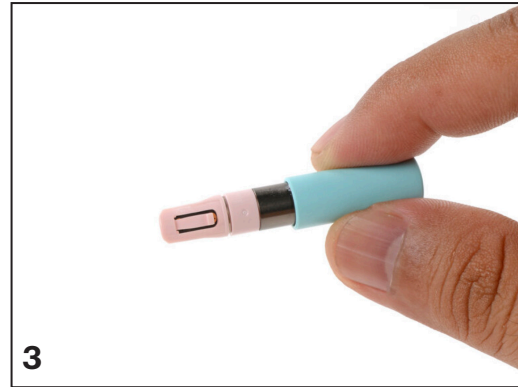
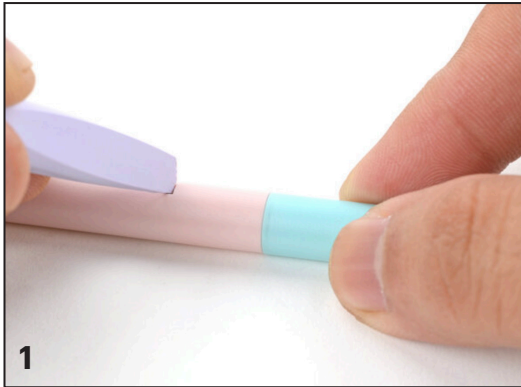


i Please DO NOT rotate the battery module.

Step 3

Install the replacement battery


- Align the battery clip with its barrel cutout.
- Slide the battery into the Stylus until you hear a click. You should feel very little resistance.

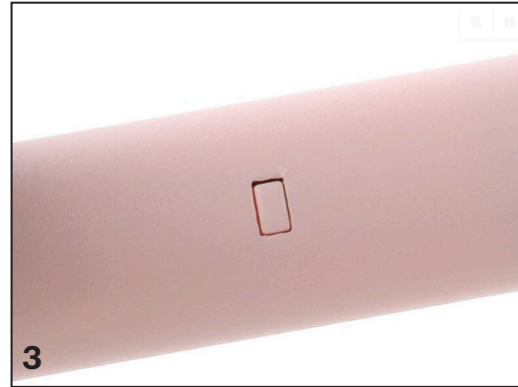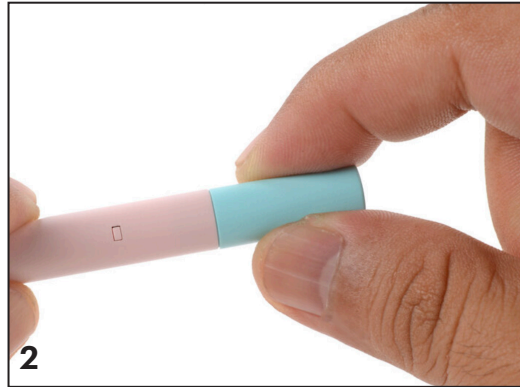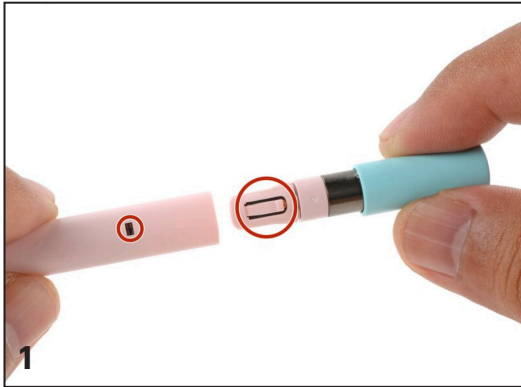

i Make sure the battery's fully seated. The clip should sit flush with the barrel.

Step 4

- Plug the Stylus into your Framework Laptop 12 or a USB power source to bring the battery out of ship mode.
- Once the LED lights up, unplug the Stylus. It's now ready for use!

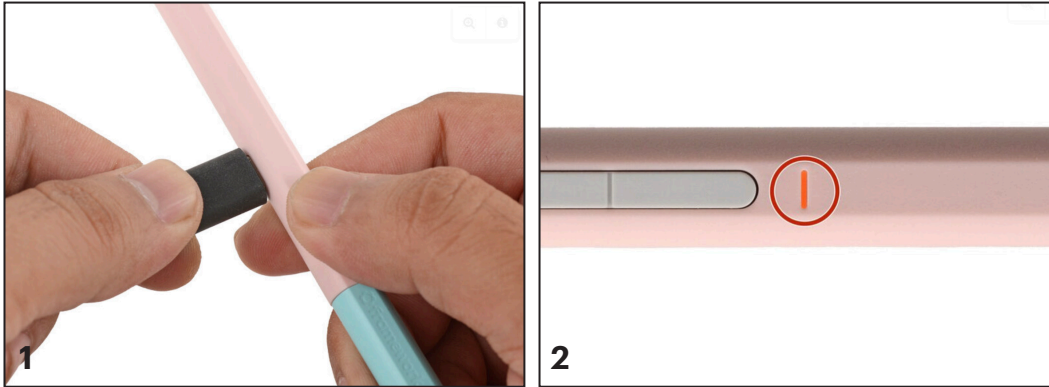

Care and Storage

[Cleaning]: Keep the stylus clean by gently wiping it with a soft, dry cloth. Avoid using any alcohol or abrasive materials which may damage the surface of stylus.

[Storage]: Store your stylus in a dry location.

[Battery Care]: To maintain battery health, recharge your stylus every month if not in use.

[Avoid Extreme Conditions]: Do not expose the stylus to temperatures outside the range of -20°C to 70°C or to humidity levels above 95%.



- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Safety and Battery Disposal

⚠ CAUTION:

- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
- Do not expose your portable device or battery pack to a heat source. When heated to excessive temperatures, battery cells could explode, posing risk of fire.
- Keep the battery away from children.

⚠ 警告：

- 如果使用不正確的電池類型進行更換，可能有發生爆炸的危險。廢棄電池的處置需依照指示處理。
- 為了減少發生火災或燒燙的風險，請勿將電池拆開、擠壓或弄破；請勿造成電池外部接點短路；請勿將電池丟入火中或水中。
- 請勿將可攜式裝置或電池組暴露於熱源中。當加熱到過高溫度時，電池可能會爆炸，造成火災風險。
- 請將電池放在兒童接觸不到的地方。

Scan to get started



Stylus

<https://fr.mw/FRAPBR>